

# New Part WOW Process - Metal



**STEP 1:** Clean and inspect panel. Use Standox Silicone Remover 6600 and Audurra Degreasing Cloth.



**STEP 2:** If required, sand with Audurra Premium Sanding Disc C to remove imperfections in e-coat. If there are no imperfections or damage, go to step 3.



**STEP 3:** Scuff sand entire panel with Audurra Fleece Pad very fine (red)\*.




**STEP 4:** Clean panel thoroughly. Use Standox Silicone Remover 6600 and Audurra Degreasing Cloth.



**STEP 5:** Apply Standox VOC Nonstop Primer Surfacer U7580. Flash off.



**STEP 6:** If needed, remove dust inclusions by using Audurra Sanding Sponge Flex Ultrafine Blue.

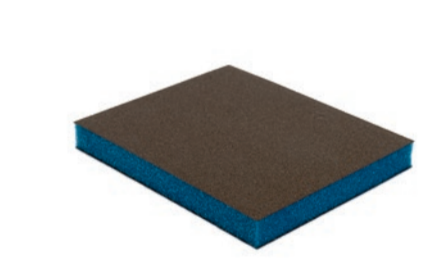

\*Due to the wide variety of electrocoats present on the market, its quality can differ a lot. For this reason preferably scuff sand the e-coat. Follow relevant Standox product TDS's

This New Part WOW Process for Metal has been performed with products from the Standox product range.